

DUMP

+ + ON

DATA LOGGING WEATHER STATION



**SILICON
CHIP** www.siliconchip.com.au

+

+

RESET

(hold until LED flashes 3 times quickly)

To dump data

1. Connect serial cable.
2. Start RS232 data logging software on computer and set file name where data will be written.
3. Set software to:
 - 19,200 baud rate
 - 8 data bits
 - no parity
 - 1 stop bit
 - hardware flow control
4. Turn 'dump' switch on
5. When LED comes on, click 'Start logging' on computer
6. When all data has been transmitted, click 'Stop logging'
7. Turn 'dump' switch off.