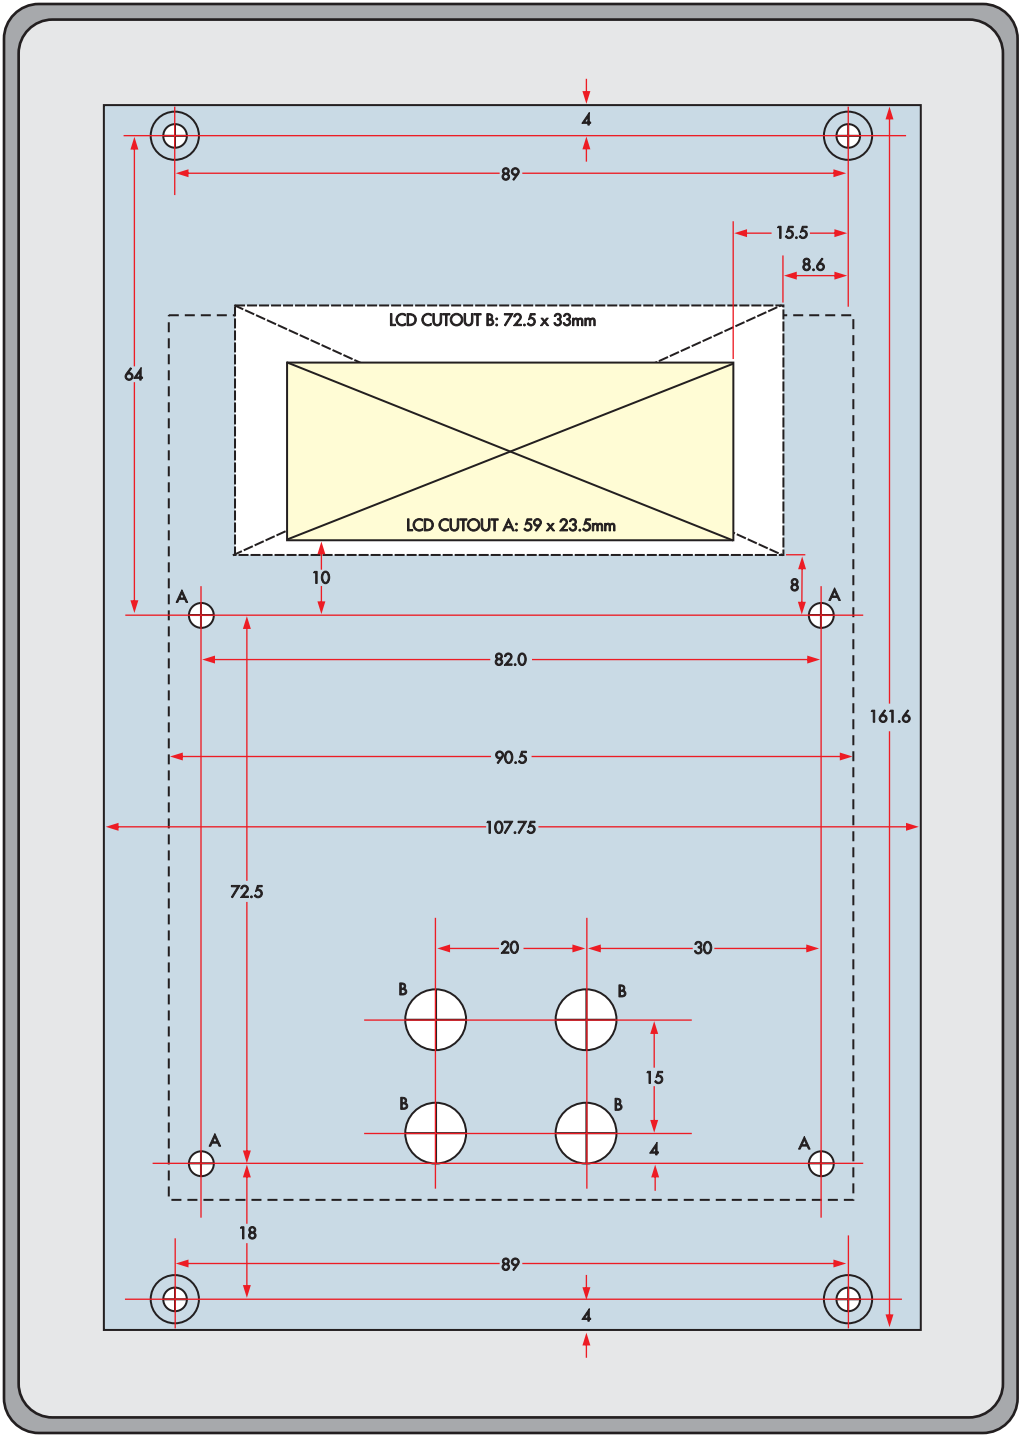

VIEW INSIDE FRONT PANEL

ALL DIMENSIONS IN MILLIMETRES

HOLES A: 3.0mm DIAM.
HOLES B: 8.0mm DIAM.

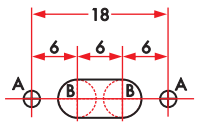

1. Drill two 2.0mm diameter holes 'A' spaced 18mm apart for switch mounting.
2. Then drill two 5.0mm diam. holes 'B' spaced 6.0mm apart and 6.0mm in from the two holes A.
3. Finally, use a small file to join the two 5.0mm holes as shown.